

New

WiSens CTD

*Autonomous Data logger
Conductivity, Temperature and Depth measurements*



Data loggers



WiSens CTD measures and records **conductivity, temperature and depth**. Salinity is deducted by calculation. It has been designed to be used down to 300m.

Compact and easy to use:

- Fast wireless configuration and data collection thanks to the WiFi communication
- Easy maintenance

Rugged and reliable:

- Optimal protection of the sensor
- Lithium batteries for long-term use (several years)


New WiSens range:

- Autonomous
- WiFi connection
- Compatible IOS, Mac OS, Windows, Android
- No specific software

nke
INSTRUMENTATION

www.nke-instrumentation.com



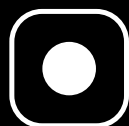

WiSens CTD Autonomous data logger

Conductivity, temperature and depth data logger



DESIGNATION		WiSens CTD
Order code		50m : 60-07-597 300m : 60-07-530
Depth (D)	Depth Accuracy	50m / 300m 0.15%
Temperature (T)	Range Accuracy	-2C to +35°C 0.005°C
Conductivity (C)	Range Accuracy	0-70 mS/cm 0.04 mS/cm
Salinity	Range Accuracy	2 - 42 PSU 0.05 PSU
Time	Internal clock with calendar	< 1mn/month
Start and stop mode	Manual or programmable	Conductivity, temperature or pressure level trigger, Date condition
Sampling rate		Programmable from 1 second to 99 hours
Autonomy	Memory Energy	16 Mo Replaceable Lithium battery
Dimensions Weight in air		230 mm x Ø 40 mm 435 gr
Communication	Wifi	Magnetic activation In option: remote control



nke
INSTRUMENTATION



Sales Department
Tel : +33 (0)2 97 36 41 31 - Fax : +33 (0)2 97 36 55 17
info.instrumentation@nke.fr
www.nke-instrumentation.com

